

SOHO HOME



## Blackcurrant & Cedar Mini Home Fragrance Collection

£46

Regular

£37

Membership

### Product details

Capturing the essence of an autumnal break at Soho Farmhouse, our Blackcurrant & Cedar fragrance is infused with notes of Cassis and Warm Spices, and grounded by a base of Cedar, Amber, and earthy Patchouli, bringing the fragrant notes of the Orchard and Walled Garden to your home. This set includes our Blackcurrant & Cedar diffuser, candle and incense sticks, alongside a ceramic incense holder.

#### Scent notes

Top: Cassis

Middle: Warm Spices

Base: Amber

- Mini set featuring a diffuser, candle, and pressed wood incense sticks with holder
- Blackcurrant & Cedar fragrance
- Vegan-friendly blend of mineral and vegetable wax
- Bespoke fragrance created by an expert perfumer for Soho House
- Inspired by Soho Farmhouse



### Dimensions

Product dimensions: H20 x W20 x D6cm / H7.9 x W7.9 x D2.4"

Product weight: 0.95kg / 2.1lbs

## Details

Fragrance: Blackcurrant and Cedar  
Material: Glass and Ceramic, mineral and vegetable wax

Diffuser: 50ml, lasts up to four weeks  
Candle: 75g, burn time: 20 hours  
Incense: 16.2g

### Care instructions

Candle: When lighting your candle for the first time, allow to burn for a minimum of 2 hours or until there is a completely molten wax pool. This will ensure good burn performance and minimise instances of 'tunnelling'.

For best results, burn your candle for at least 2 hours but no more than 4 hours at a time. Burn in an area free from draughts & keep wax pool free from debris such as match heads. Allow the wax pool to solidify completely before relighting the candle. Keep wicks trimmed to 5mm at all times to avoid smoking. Stop use when 10mm of wax remains.

Never leave a burning candle unattended. Keep out of reach of children and pets. Keep away from flammable materials, overhanging objects and polished surfaces. Never put in a warm place as this can cause the candle to overheat. Keep a minimum distance of 10cm between burning candles.

Diffuser: Unscrew cap and carefully remove the stopper from your diffuser bottle. Replace cap and insert the reeds. To refresh your fragrance turn the sticks upside down and place back into the diffuser bottle, wash your hands after handling. To achieve a subtle ambience turn the reeds every few weeks, turn more frequently for a more intense ambience. The larger the room the more often the reeds will need to be turned. Always ensure your diffuser is placed on a protective plate on a stable and level surface to avoid any spilling and staining of surfaces. Ensure the reeds and diffuser liquid do not come into contact with other materials, such as painted or polished surfaces or wallpaper and curtains as this may cause staining.

Incense: Directions of use: Place incense in the holder to ensure it captures any falling ash. Always place on a level, heat resistant surface away from drafts and any flammable or polished surfaces. Always burn the incense in a well-ventilated room. Never leave burning incense unattended. Keep away from children and pets.